



ASSEMBLY REMOVAL AND INSTALLATION

TRANSMISSION REMOVAL AND INSTALLATION

MT081-01

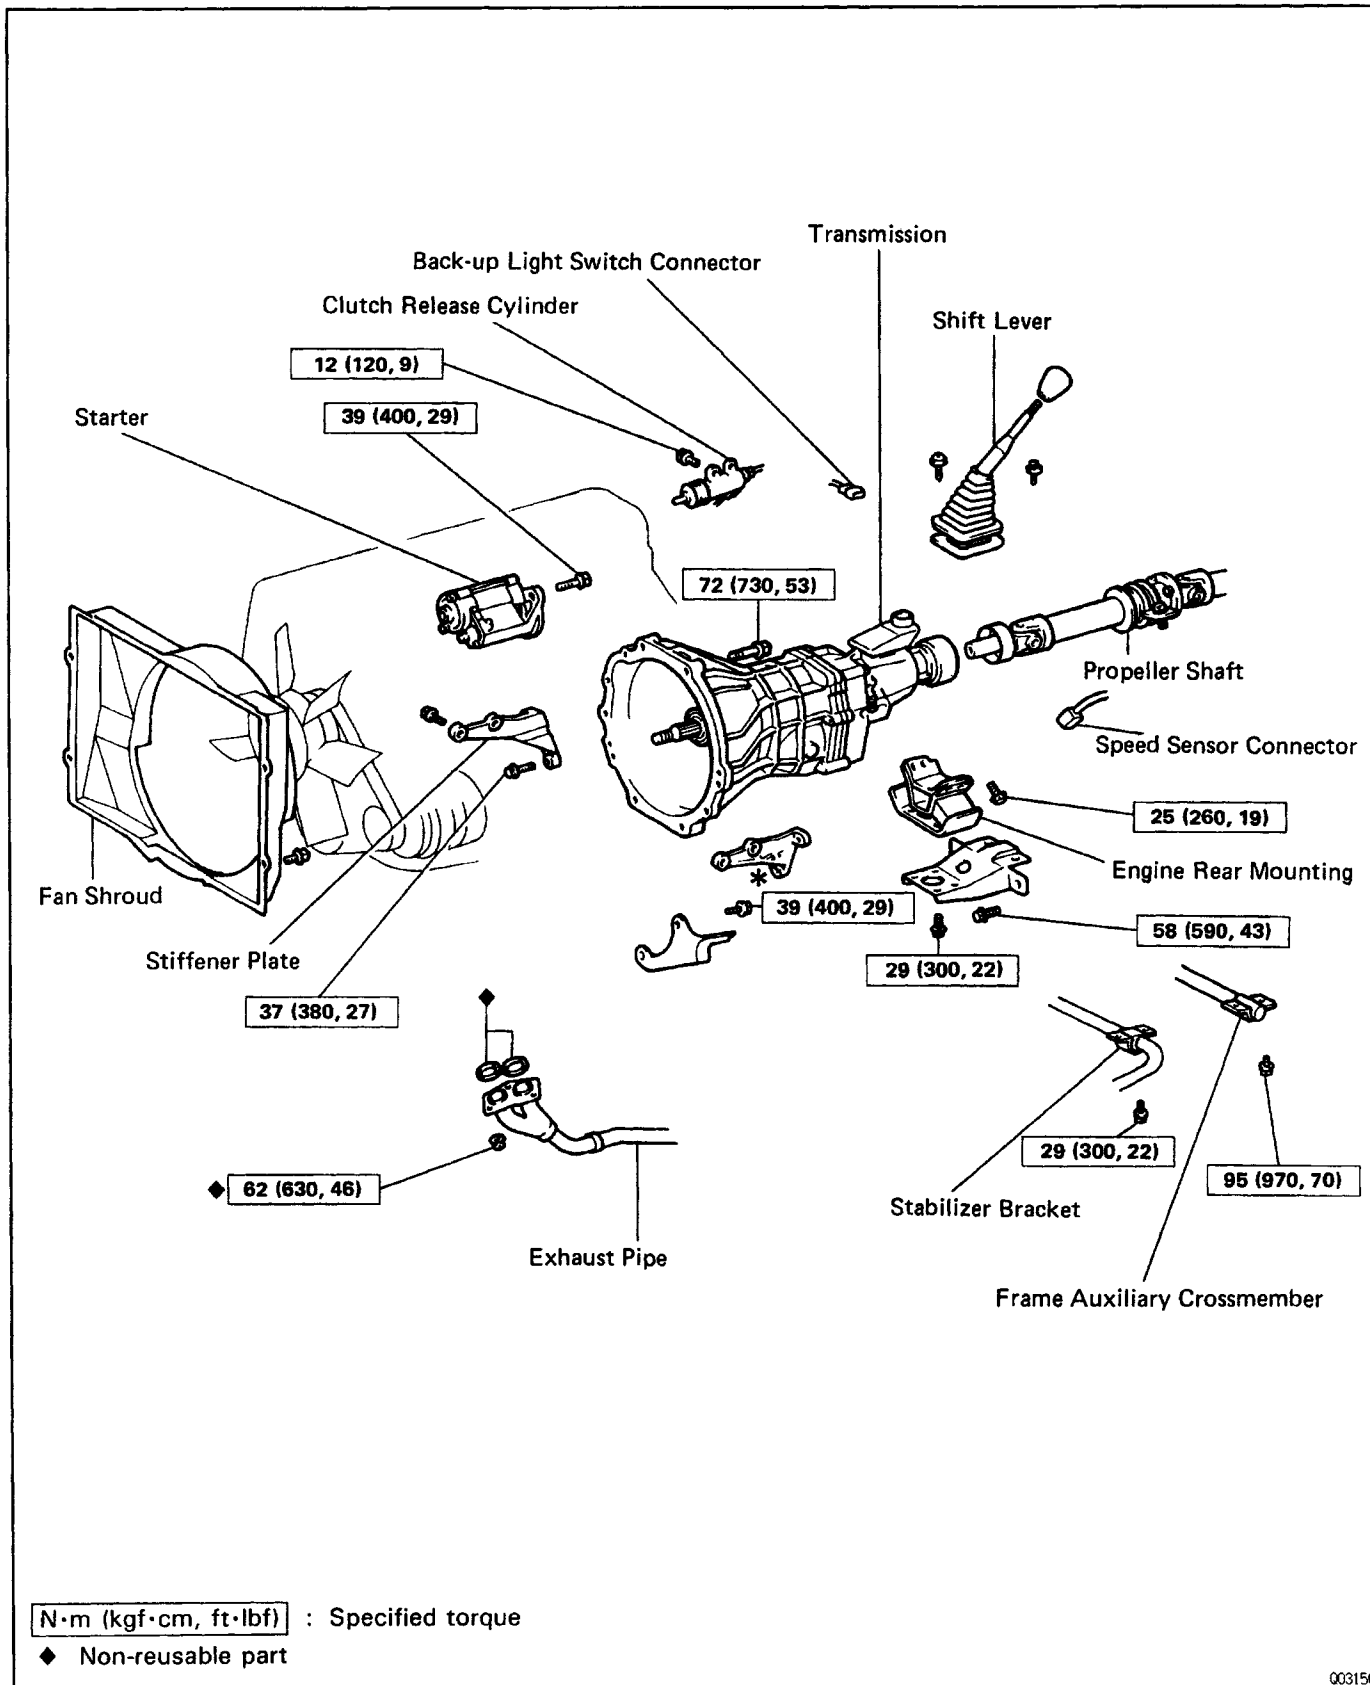

TRANSMISSION WITH TRANSFER REMOVAL AND INSTALLTION

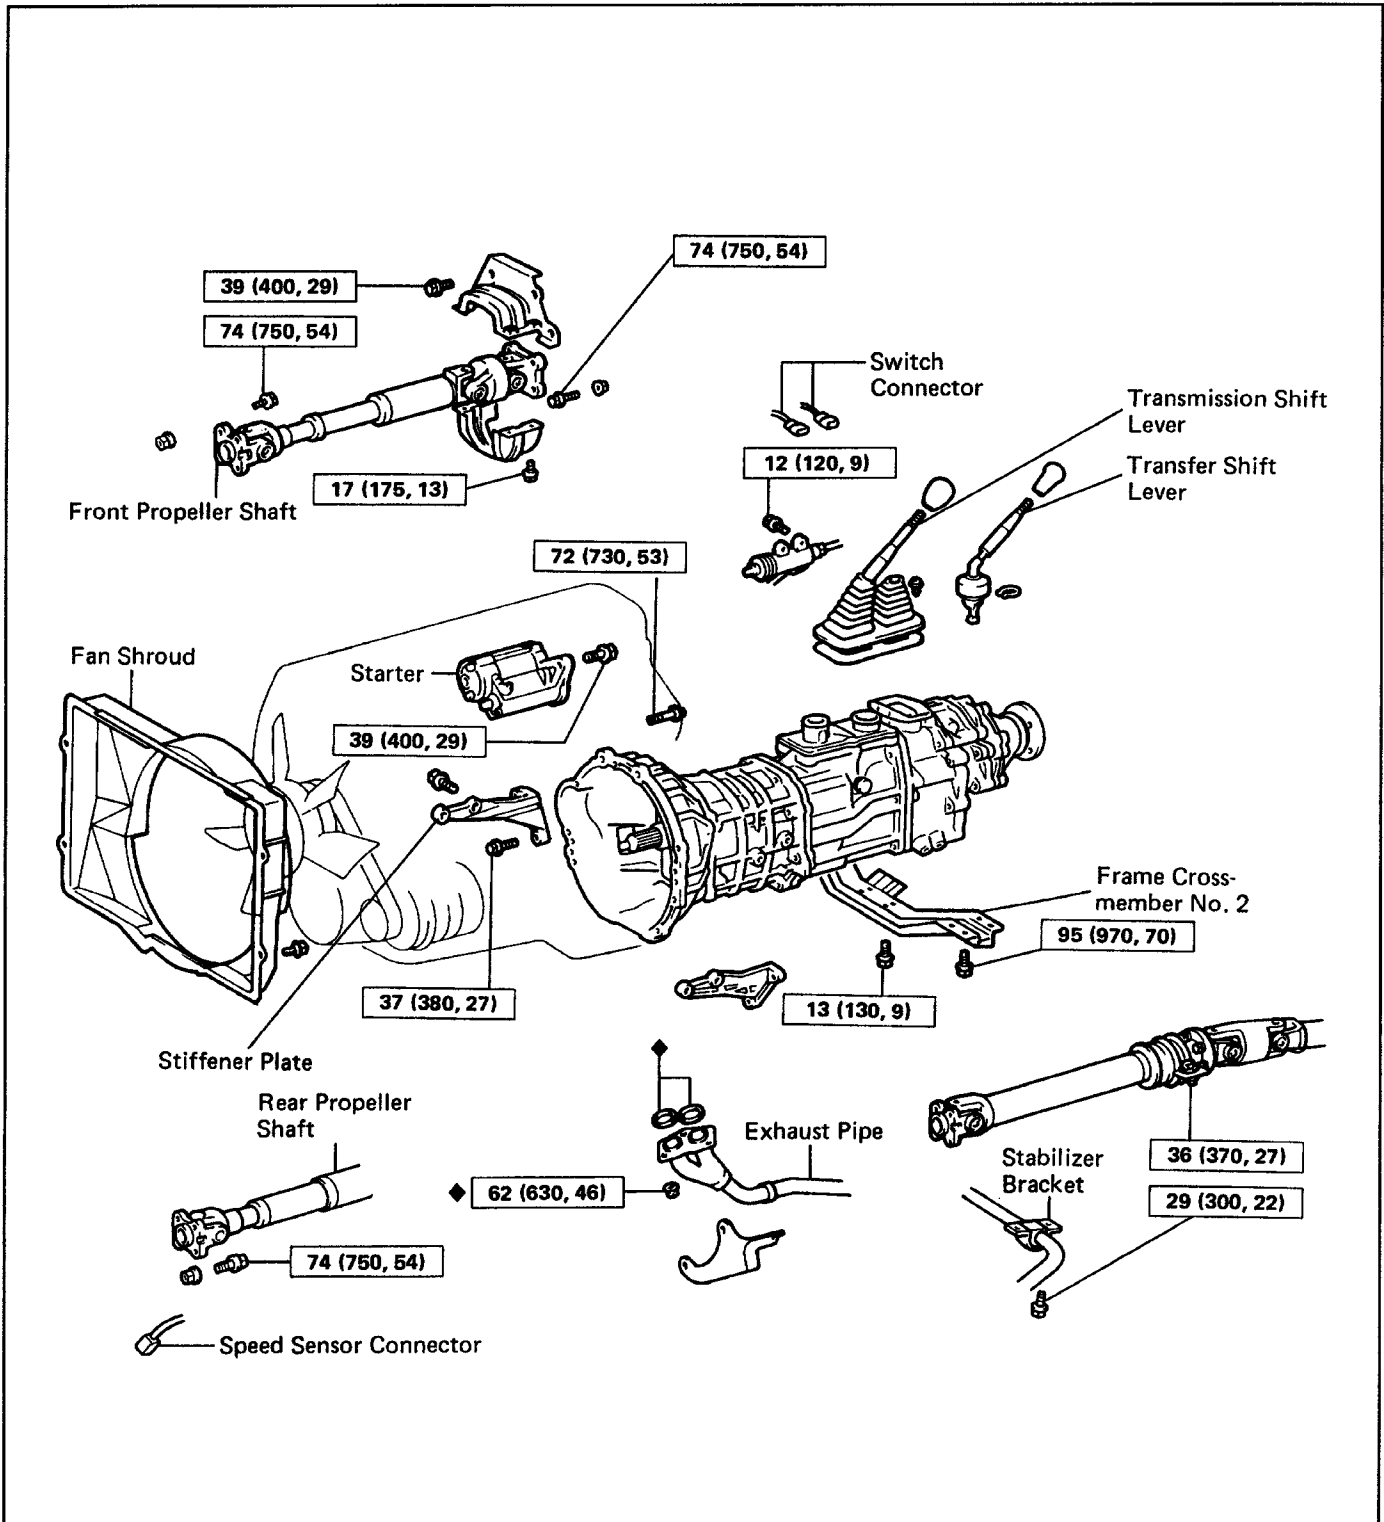

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part